



TECHNICAL MANUAL

GANGING

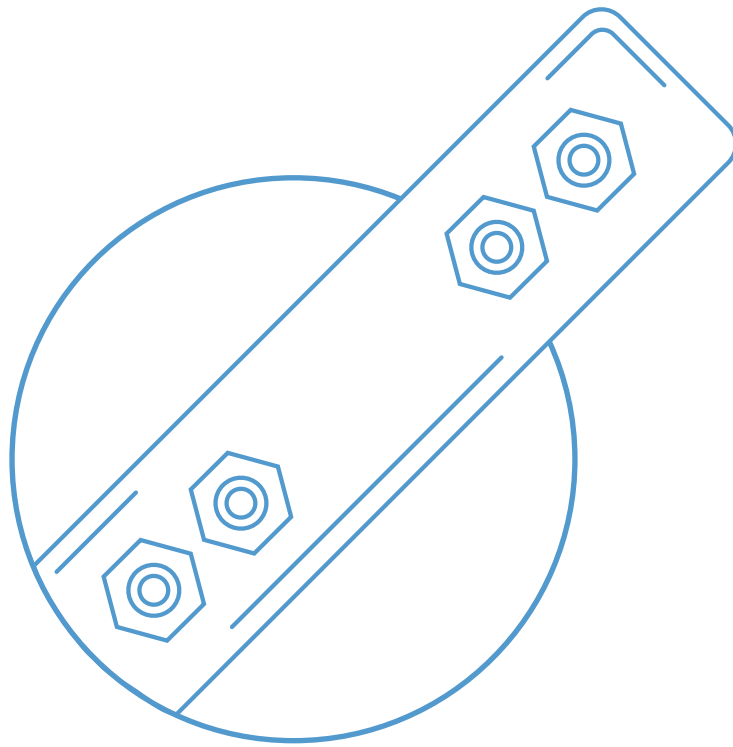



Included Hardware



Flat Metal Connecting Bracket x4




1" Wood Screw x16

Recommended Tools



Tape Measure

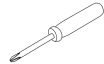


Phillips Screw Driver




Power Drill



1/16" Drill Bit

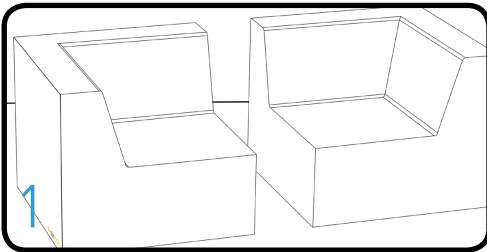


Determine the orientation of the SIXINCH products to be joined. Align the front edges of the foam - NOT the wood base.

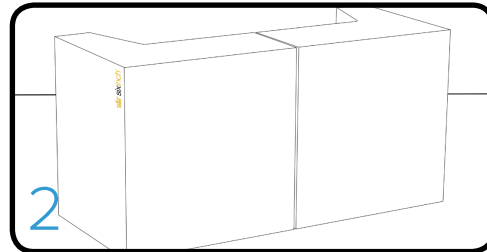


Flip the pieces onto their backs in order to attach the ganging brackets to the wood base.

Note: Every product is unique and brings its own set of challenges when ganging. Field installer will have to use best judgment when working through the process.

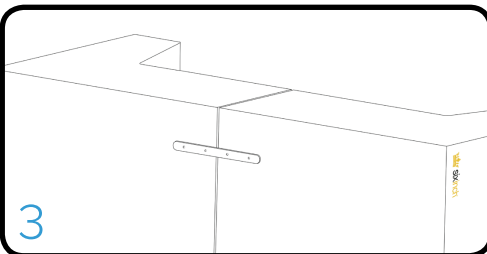

Align the first bracket parallel with the front edge, roughly 4-6 inches from the top. Make sure the pieces are pressed tightly together.

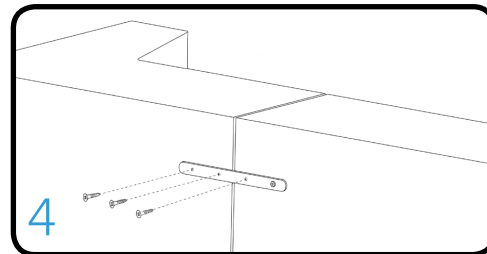

Attach the brackets to the wood base using the (4) provided wood screws. Be sure screws are securely attached.

***SIXINCH recommends using (at least) 3 ganging brackets per (2) pieces.**

